

Short Form Guide Specifications
PLAZA PAVER
Section 07762 Roof Pavers and Ballast Materials

Part 1: Products

1.01 MANUFACTURER

- A. Westile
8311 W. Carder Ct.
Littleton, CO 80125
(303) 791-1700
(800) 433-8453
(303) 791-9906 Fax

1.02 PAVER SYSTEM (select one)

- A. Level System: Provides a level paver surface over a sloped roofing assembly
- B. Sloped System: Provides a paver surface that conforms to the slope of the roofing assembly.

1.03 PLAZA PAVERS (select one)

- A. Plaza Paver is available from regional manufacturing facilities. These facilities service the following US regions: West, North Central Northeast, and South Central Southeast. Call Westile at 800-433-8453 for regional product availability.

1.04 ACCESSORIES (select one or combine selections)

- A. ScrewJack Adjustable Pedestals (for use with Level System): Models B1, B2, B3, B4.
- B. ScrewJack Coupler Model C4
- C. ScrewJack Shim: Model B11.
- D. Fixed Height Pedestals (for use in Sloped System and/or can be used in Level System): Pave EI 4x, 5x, 6x, 7x.
- E. Fixed Height Shims: Pave EI 4x, 5x, 6x, 7x.
- F. Spacer Tab
- G. Probst Slab Grabber

Part 2: Installation

2.01 INSPECTION

- A. Pedestals are smooth, sound, clean and free of irregularities.
- B. Related work penetrating the plane of the roof is completed.
- C. Verify that the roof deck will sustain the weight of the Plaza Paver system.
- D. Do not commence paver application until unsatisfactory conditions are satisfied.

2.02 PREPARATION

- A. Broom deck surface clean

2.03 INSTALLATION (requirements for installation are dependent upon individual project needs).

- A. First, determine a starting point; this will be largely dependent on where less than full size pavers are to be used.
- B. Establish a grid pattern for the pedestals using chalk lines. Place ScrewJack Adjustable Pedestals or fixed height pedestals at the grid line intersections. If the Level System is used, use a laser leveling device or a mason's line stretched from opposite sides to select the correct model of ScrewJack Adjustable Pedestal.
- C. Install Plaza Pavers. Fine tune adjustments to the paver surface can be made by using the pedestal shims.

Part 3: Maintenance

3.01 CLEANING

- A. During the course of the work and on completion, remove any cut dust from the surface of the pavers by means of high-pressure water or air; cut dust can and will discolor pavers if left unattended. High-pressure water can be applied at any time to clean the paver surface.
- B. Plaza Pavers can be easily removed from their existing locations by using the Probst Stab Grabber; this will allow easy access for repairs or cleaning of the substructure.

3.02 SEALING

- A. Concrete sealer may be applied to paver, but is not required.

Part 4: Warranty

4.01 Individual components of the Level and Sloped Systems are warranted as follows:

- A. Plaza Pavers - Limited 10 year warranty.
- B. ScrewJack, Pave El Pedestals / Shims / Couplers and Spacer Tabs - Limited 3 year warranty
- C. Probst Slab Grabber - Limited 3 year warranty.